


# Fitting Template

Line up the vertical line on this template with the gap between the gates or the gate and post. Tape the template securely to the gate and cut down the vertical line on the template. Centre-punch the crosses and drill out as detailed on the attached sheet entitled "Fitting". Invert the template for installing the other way around.

This template is for use with standard Multi-Locks. For installations with tubular frames special Multi-Locks are available from Tayhope

Catch (if used) Side

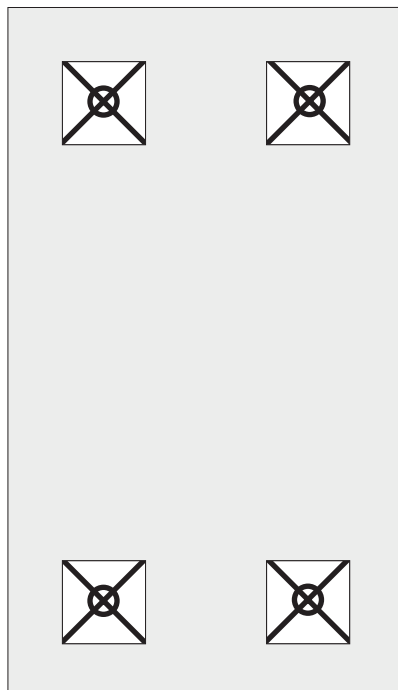

Lock Side



Catch (if used) Side

Lock Side